# UniNet®

PRINT ON DEMAND ANY JOB | ANY SIZE | ANY TIME

# <u>Setting the Multipurpose tray to work with</u> <u>specific sized papers with the iColor® 500</u>

iColor<sup>®</sup> transfer papers come in a variety of sizes, so it is recommended that you set the MPT tray to the size of the paper that you most commonly use. If the MPT tray identifies a paper that is not within its set parameters, the iColor<sup>®</sup> 500 printer will prompt you to press the online button after each print. Adjusting the settings will avoid this for the specific size you set.

The following instructions are for printers that have been set up within a network, using an IP address. Use your web browser to change the default settings:

- 1) From your web browser, go to 192.168.X.X (the specific IP address assigned to your printer)
- 2) Navigate to the admin menu and enter the username (root) and password (aaaaaa) (six lowercase letter a's)
- 3) Change all settings to match the following for Printer > Print Setup > Print Method:

» Status	Print Method			
Printer	The Print Menu determines the default attributes of a print iob. Most print iobs include			
•General Printer Settings	commands that override these settings.			
•Print Setup	Output Options			
•Print Method	Copies	1 (	1-999)	
•Print Quality	Duplex	On V	2	
•Print Adjust	Dupley Last Dage	Ckin Pl-	-	
•Media Setup	Duplex Last Page			
•Color Setup	Binding	Binding Long Edge 🔻 🗳		
•Printer Config Setup	Dapar Input Options			
•PCL Setup	Paper Input Options			
•IBM PPR Setup	Tray Switch 诸		Tray Select 🔋	
•EPSON FX Setup	Auto Tray Switch : On ▼			
•Interface	Tray Sequence : Down	T	Tray Sequence : Down 🔻	
•USB			Paper Feed : MPTray 🔻	
•Parallel			MPTray Usage : When Mismatching 🔻	
•Memory Setup	Edit olar			
•Time Setup	Edit Size	Cassett	Cassette Size	
•System Setup	Default Orientation	Portrait	Portrait 🔹	
•Save / Restore	Form Length	56 LINES(5-128)		
•Hex Dump	Media Check	Enable 🔻 📴		
•Print Information	Tranning			
» Network	тарріну	0//		
» Job List	Trapping	Off	•	
» Print	Other			
» Security	Mono-Print Speed	Auto	¥	
» Maintenance				

4) Change all settings to match the following for Media Setup. The MPTray setting is the most important setting. The Media Type and Media Weight can be set to your most common settings, but the RIP will over ride:

» Status	Media Menu				
¥ Printer	The Media Menu describes the paper or media loaded in the printer's paper trays.				
•General Printer Settings	Tray Configuration				
Print Setup	Tray	Paper Size	Media Type	Media Weight	
Print Method     Print Quality	Tray1	Cassette Size 🔻	Plain 🔻	Medium •	
•Print Adjust	MPTray	Letter •	Glossy 🔻	Heavy 🔻	
•Media Setup					
•Color Setup	User Setting				
•Printer Config Setup	You can set "Printing area" and "User Media Type".				
•PCL Setup	» Specify the printing area				
•IBM PPR Setup	» Specify special sizing of paper and assign to a Tray				

- 5) With these settings in place, you will be able to print to the MPTray without pressing the online button at all (even for the first page out, it prints completely unattended). When using the printer without the iColor<sup>®</sup> TransferRIP, the printer will now always look for paper in the MPT first. If it does not find it there it will pull from the tray on bottom so this setting works great for all uses.
- 6) When using the iColor<sup>®</sup> TransferRIP, you should <u>not</u> check the 'Force Manual Tray' box and the input tray should be set to 'Printer Default'.

Print settings:		
	Media Type:	Medium, 83 - 104 g/m2 🔹
	Custom Media:	Force Manual Tray and User defined Media Size
	Input Tray:	Printer Default   Output Tray: Automatic
	Offset X:	-4.00 Offset Y: 0.00 Measure Units: mm

If you are not networking your printer, the following instructions are for printers that have been set up via direct connection using the USB port:

1) Press the 'Menu' button and scroll down to 'Menus' and press enter



### 2) Select 'Tray Configuration' and press enter



3) Select 'Paper Feed' and press enter



4) Select 'MPTray' and press enter



## UniNet 3232 W. El Segundo Blvd., Hawthorne, California 90250 | sales@icolorprint.com www.icolorprint.com

5) Press back, select 'Auto Tray Switch' and press enter



6) Select 'On' and press enter



7) Press back, select 'Tray Sequence', select 'Down' and press enter



### 8) Press back, select 'MPTray Config' and press enter



9) Select 'Paper Size', press enter. Select 'Letter' and press enter



10) Press back, select 'Media Type', press enter. Select 'Glossy' and press enter



11) Press back, select 'Media Weight', press enter. Select 'Heavy' and press enter



12) Press back, select 'Tray Usage', press enter. Select 'When Mismatching' and press enter



13) Press the online button to return to the main screen. You are now ready to print on your preferred media through the MPTray without pressing online!