

Quick Start Guide





for the iColor 540

1. Unpack the machine, check all components and remove the orange tape from all sides. Then open the top lid.







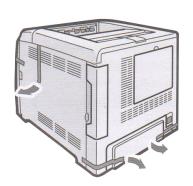


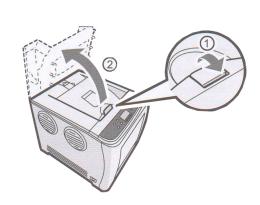


2. Remove the white toner cartridge. Remove protective foam from inside the machine and protective film from the white cartridge and reinstall.

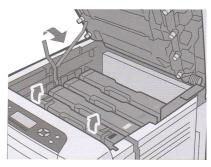

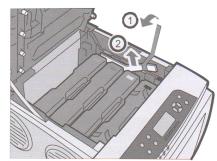

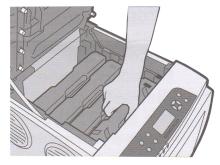

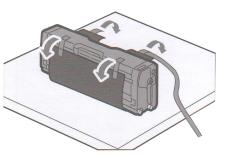

3. Using the provided USB drive, install the driver. Refer to the User Manual for selecting the appropriate driver.

Only connect the Printer to the PC when prompted to by the software.

4. There are three possible configurations of the iColor 540. These coincide with the 'Print Queues' in the iColor ProRIP (Step 13).



Standard CMYK







5. Install the iColor ProRIP (stored on the provided drive)









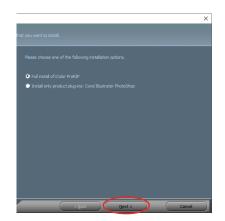

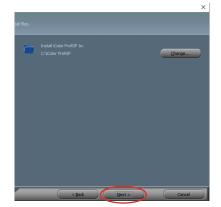


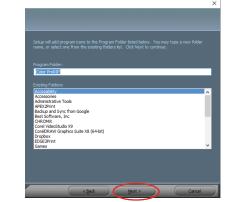

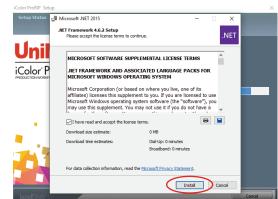


After the iColor ProRIP installation is complete, the setup will begin. Internet connection is required.


6. Confirm first time setup. And click 'OK'.

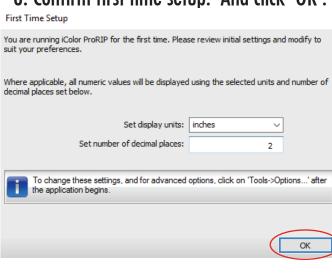


7. Click "Install Printer".

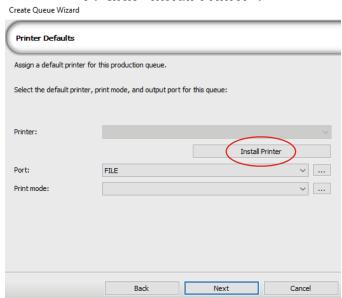


8. Choose the iColor 540 and click 'OK'.

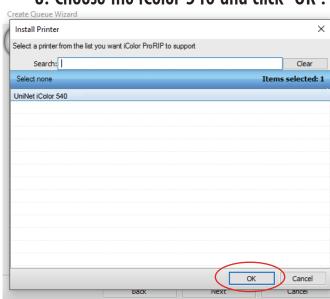


9. To install the Print Queues click 'Next'.

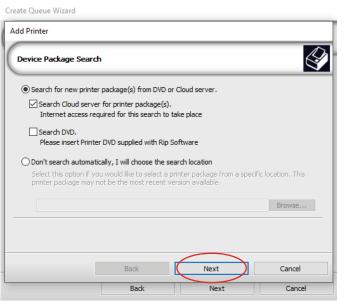


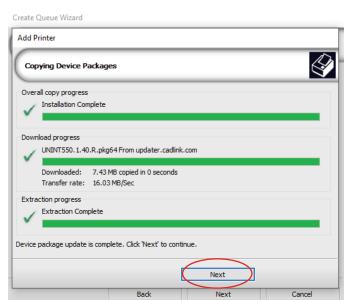

10. Setup is now complete.

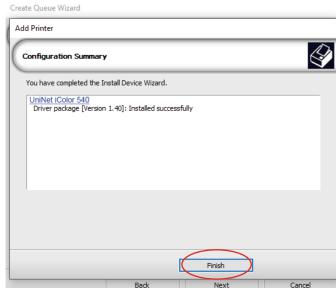

11. Open the iColor ProRIP and click Queue/Manage Queues.

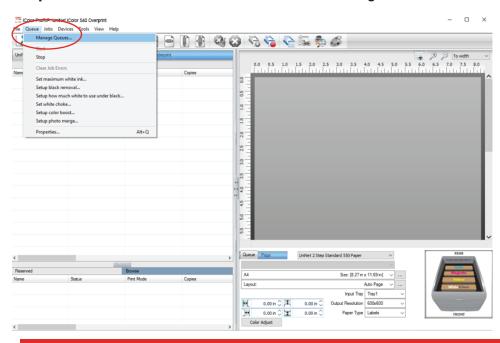


12. In the 'Port' drop down menu, choose the port, and click 'Close'.



13. Select your 'Print Que' and 'Print Mode'. The 'Print Modes' have preset values for white coverage, choke, paper size, paper tray and mirror settings. These can be modified as needed.

Please note, the preview icon should match the physical configuration of the printer.

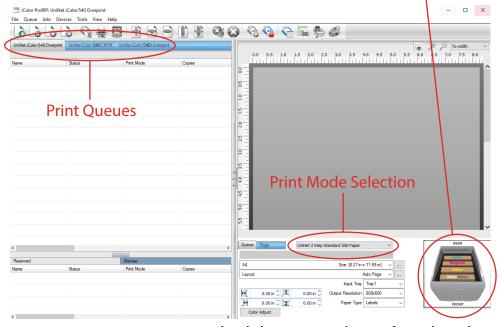

14. To load a file, click the green icon in the menu bar. Then choose the desired file. After, click the 'Print' icon in the menu bar.

