

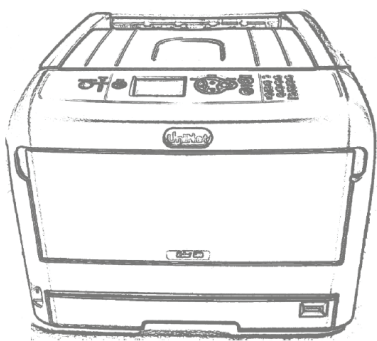


1. Remove the packing materials and check the components.




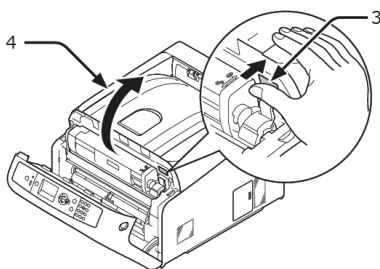


2. Open the front door and top lid of the printer.

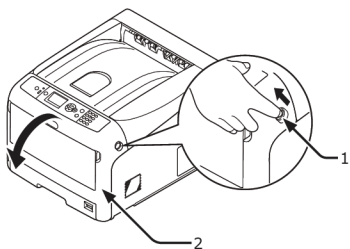

3. Uninstall the cartridges to remove the protective orange film from each.
Lock the blue lever forward. Reinstall the cartridges.

* Please note the blue handle on the white cartridge is already in the locked position *



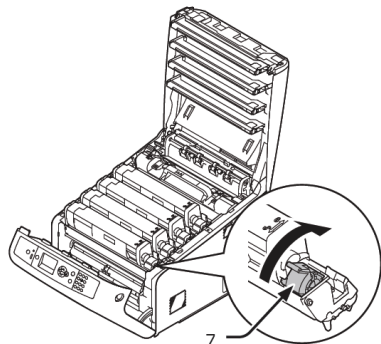
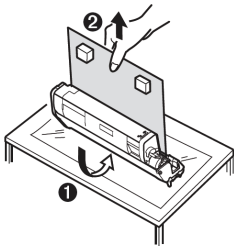
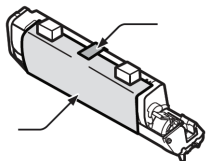
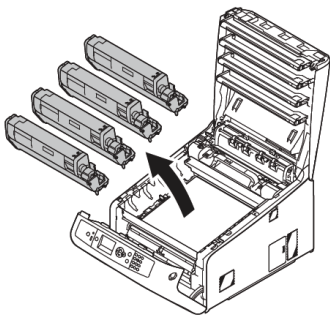


4. Using the provided USB drive, install the driver.

Only connect the Printer to the PC when prompted to by the software.


Connect the power cord and USB cable to the printer. Power on the printer.

5. Install the iColor ProRIP (stored on the provided drive)

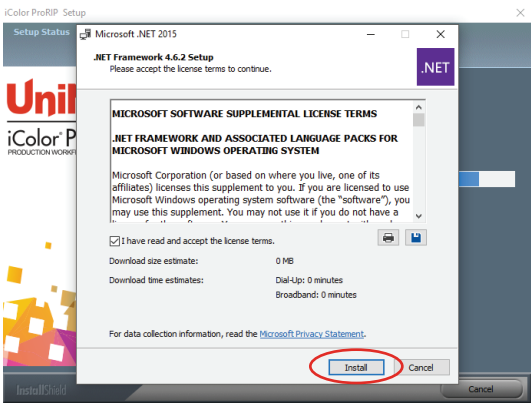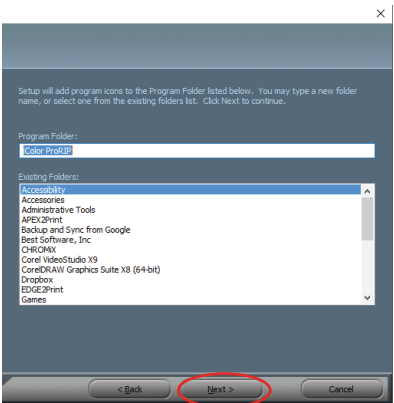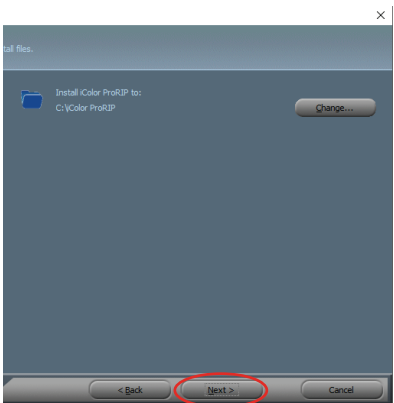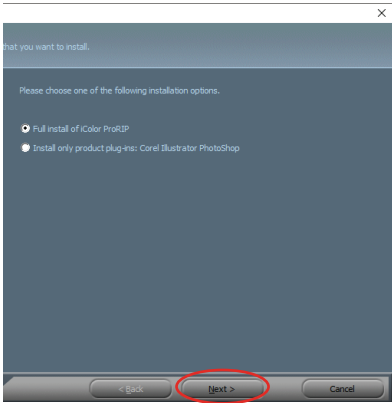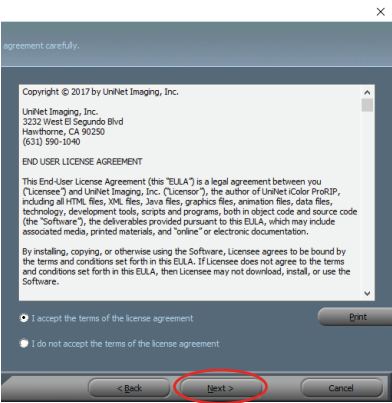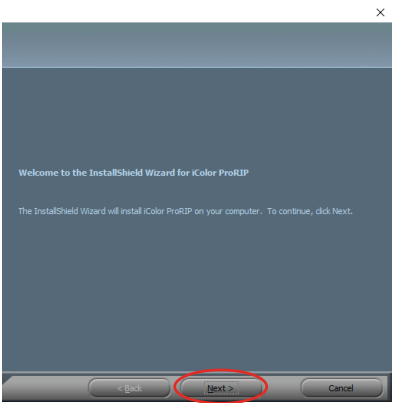


After the iColor ProRIP installation is complete, the setup will begin. Internet connection is required.


6. Confirm first time setup. And click 'OK'.

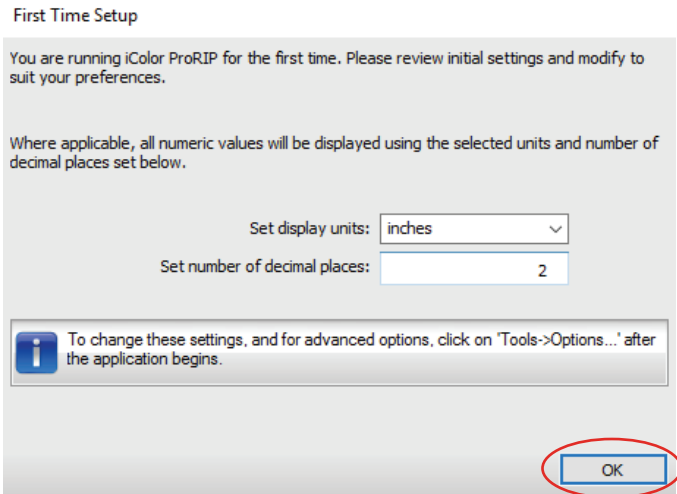



7. Click "Install Printer".

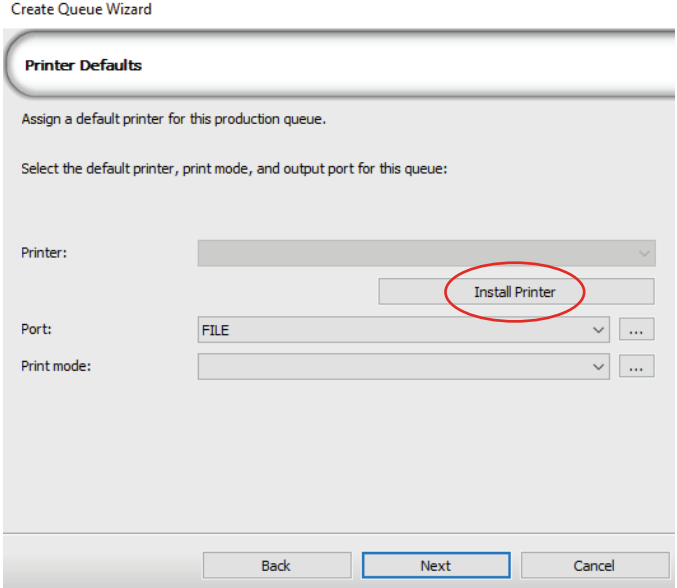


8. Choose the iColor 600 and click 'OK'.

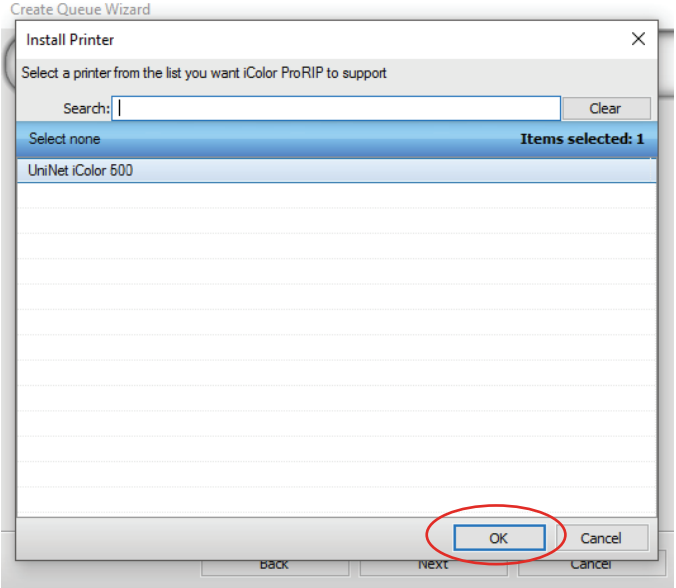


9. To install the Print Queues click 'Next'.

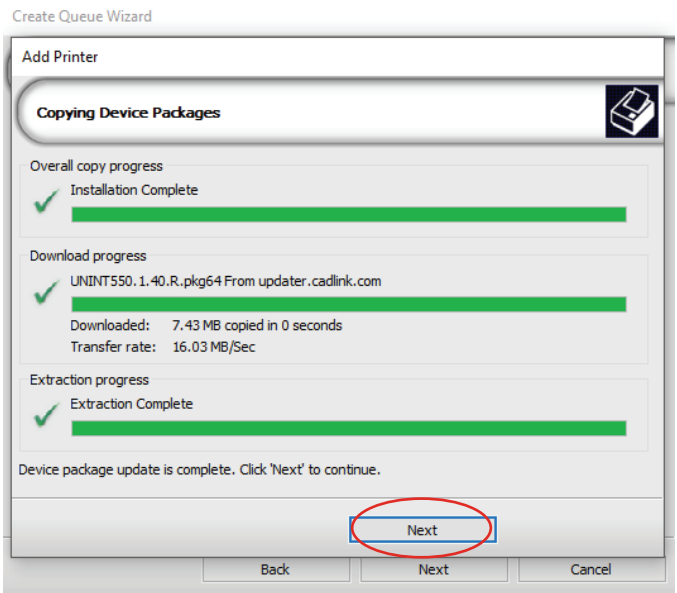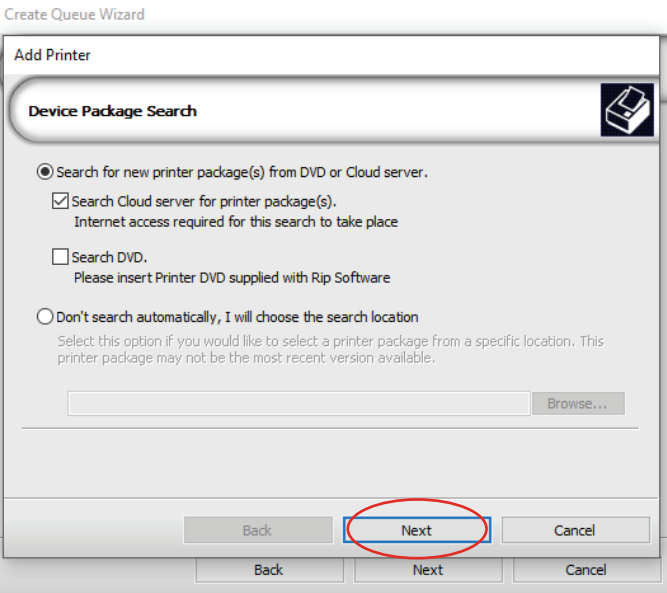


10. Setup is now complete.

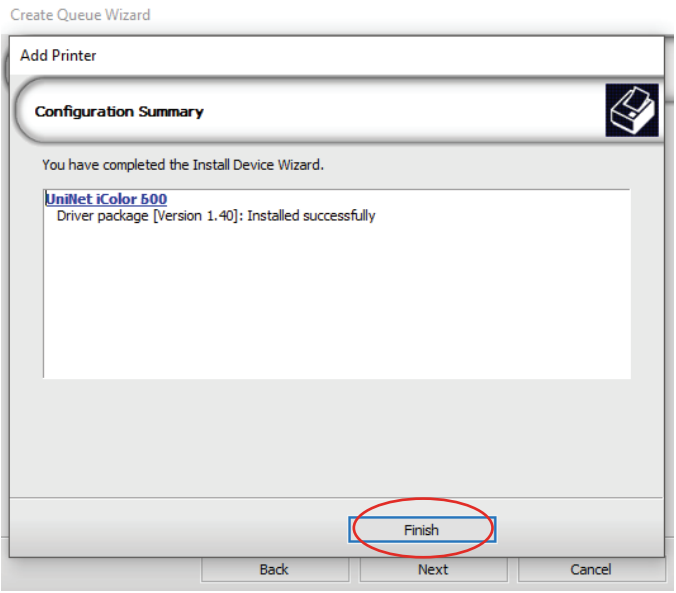

11. Open the iColor ProRIP and click Queue/Manage Queues.

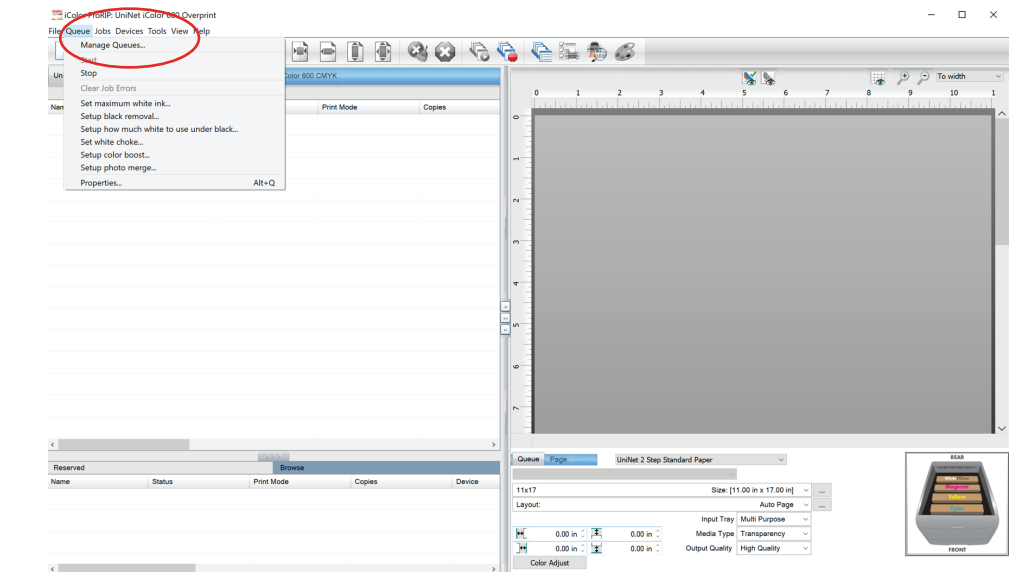


12. In the 'Port' drop down menu, choose the port, and click 'Close'.

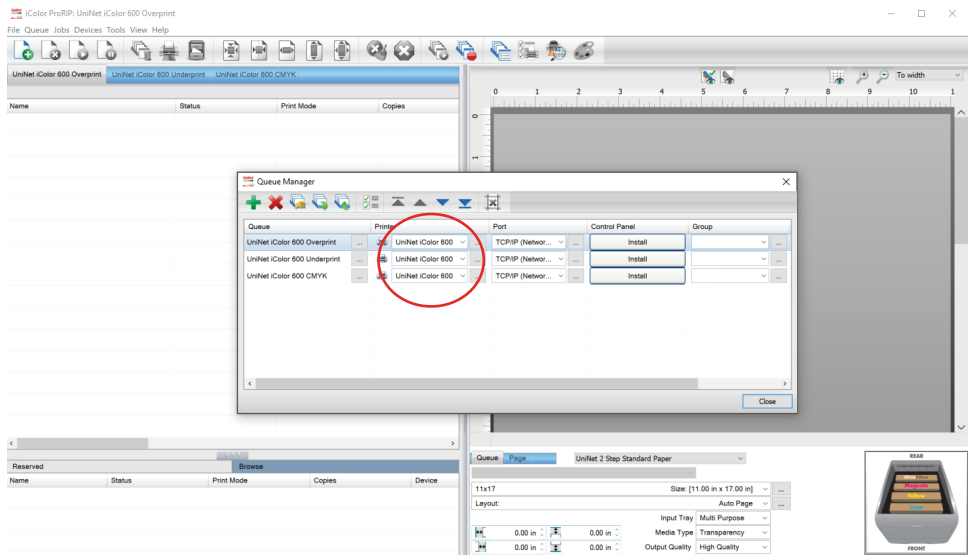


13. Select your 'Print Que' and 'Print Mode'. The 'Print Modes' have preset values for white coverage, choke, paper size, paper tray and mirror settings. These can be modified as needed.

Please note, the preview icon should match the physical configuration of the printer.

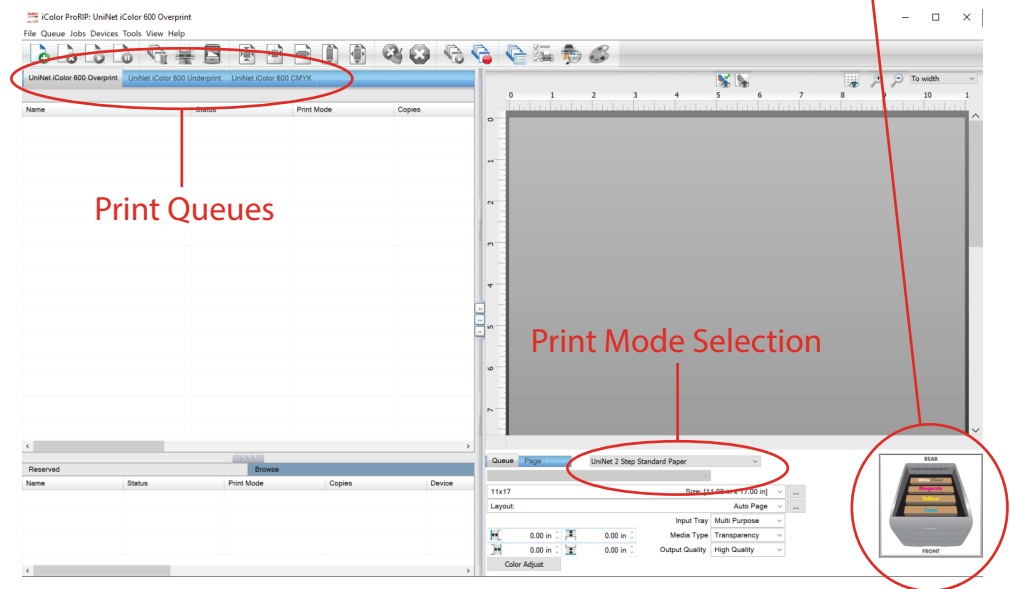

14. To load a file, click the green icon in the menu bar. Then choose the desired file. After, click the 'Print' icon in the menu bar.

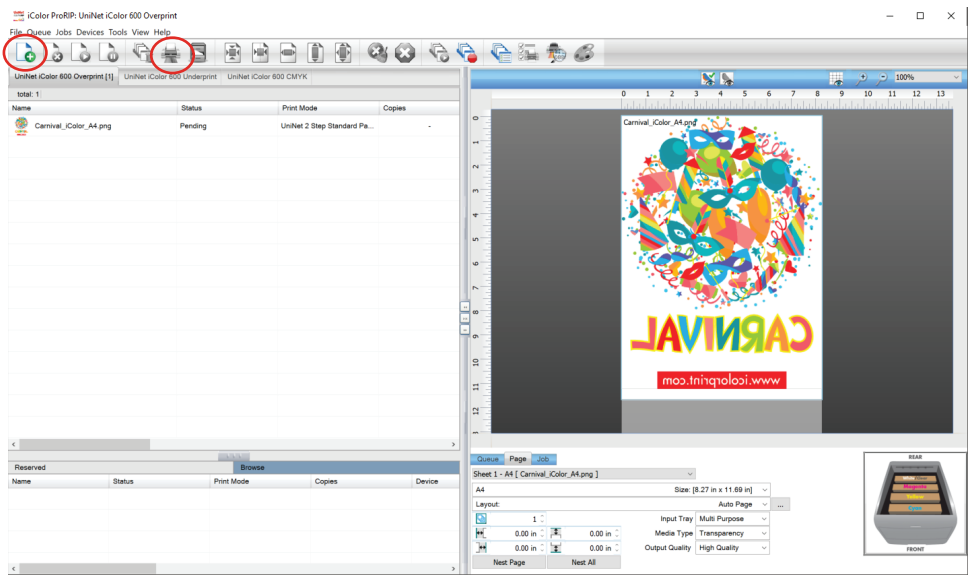

For detailed instructions please refer to the iColor 600 Printer User Manual and the iColor ProRIP User Manual